

LIGHTWEIGHT | MAINTENANCE FREE | DURABLE



Capri Lining colour:
Golden Oak



The Capri high-density uPVC lining is the perfect alternative to traditional timber lining for both indoors and out-of-weather applications. The product is sustainably sourced from 95% recycled uPVC, with no harmful materials. Capri is non-toxic, non-caustic, contains no wood filler, and is extremely lightweight, durable and long lasting. When choosing Capri lining, you get the natural look of wood, in a prefinished, durable material with almost no maintenance. Quick and easy to install, Capri lining comes in 5 colours with matching trims.




NOTE: Colours shown for illustration only.

WHY CHOOSE CAPRI LINING?

- Indoor and out of weather applicaiton only
- Natural wood look
- Quick and easy installation
- Long-lasting
- 5.8m lengths - less joining
- Invisible fixings - tongue and groove boards slot together neatly.
- Moisture resistant
- Low maintenece - No oiling. No painting. Save money and time.
- Easy maintenance - wipe down with a damp cloth.
- UV resistant and colour stable
- Durable and easy to cut into any shape.
- 25 Year factory warranty against cracking and peeling.


PROFILE - Lining

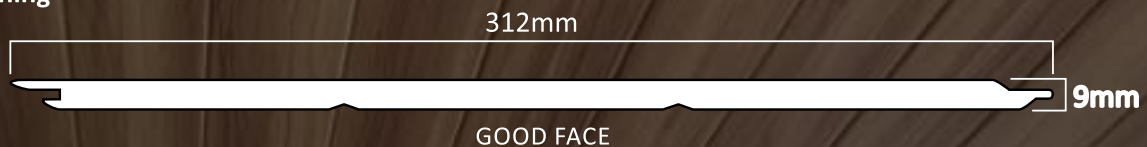

PROFILE - Trims All trims are 5800mm long



"H" (Join) Trim

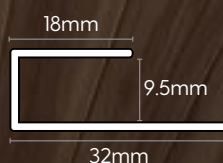

"J" (Start) Trim



External Trim

SPECIFICATIONS

Length	5800mm
Width	312mm
Thickness	9mm
Coverage	300mm
Span	450mm

HEAD OFFICE: BAYSWATER | 144 Beechboro Road South | (08) 9473 5100
 info@mbsales.net.au |
 mbsales.net.au

CAPRI LINING INSTALLATION INSTRUCTIONS

1. On delivery make sure to store all panels on a flat surface, in a cool dry area, and do not remove from packaging until ready for installation - to avoid potential damage to panels.
2. When carrying Capri lining boxes, always carry them sideways, on the edge, as opposed to face up/down.
3. When removing panels from the packaging, do not slide boards from the end, open pack down the centre where taped and lift boards as required. Keep panels under cover to avoid temperature fluctuations during installation.
4. Check all panels for any damage prior to cutting and installing, only install panels in perfect condition. Spacing for timber or steel supports is not more than 450mm joist centres.
5. Use J/Trims for all exposed edges and ends, and H/Trims for joining of sheets where a butt joint is required; use external corner trims where applicable. All trims should be fixed by applying a thin bead of glue all the way along the trim and securing with a flat head screw every 350mm.
6. Capri lining is suitable for OUT OF WEATHER application only i.e. NO direct sunlight and NO direct rain.
7. Ensure that all joists are flat and level. This can be done by placing a string line between the first and last joist along a run and adjust all intermediate joists to suit.
8. Use the stainless steel support clips and screws, by sliding clips along the wide edge of the boards to line up to your support joists, one clip to every support beam (5800mm board will require 12 clips at 450mm centres).
9. Use the screws supplied for fixing into timber (or equivalent strength screws or rivets for fixing to metal supports), drive the screws home tight so not to foul the next sheet sliding into place.
10. When using PVC panelling, allow (5mm) gap at each end to allow for expansion for those 40deg days during our Australian summer.
11. It is also recommended to use Siegel flex MS20 white adhesive or similar to secure panels to your timber or metal supports. (One blob about the size of a 20c piece in the centre of the boards at each joist where the sheets touch the timbers or metal supports). Available from where you purchased your Capri lining.
12. Important: Make sure the air above the installed panels has adequate ventilation and / or insulation to stop build-up of air pressure on hot days, due to trapped air becoming overheated and putting downward pressure on the panels. Use whirlybirds, air vents, and insulation to achieve this.
13. All installations should be done by qualified carpenters or trades people experienced in installing panelling products.

CLEANING, CARE AND MAINTENANCE.

- After installation, or as cleaning is required, use a spray and wipe and soft cloth to remove fingerprints and dust particles. DO NOT use any harsh chemicals or cleaning agents .
- The use of fire pits, BBQs or external heaters directly below Capri lining should be avoided at all costs.

Following the above instructions will guarantee the best possible installation and ongoing performance of your ceiling lining. If any further information is required, please ring our office and speak to one of our experienced consultants.

Capri Lining colour:
Rosewood.